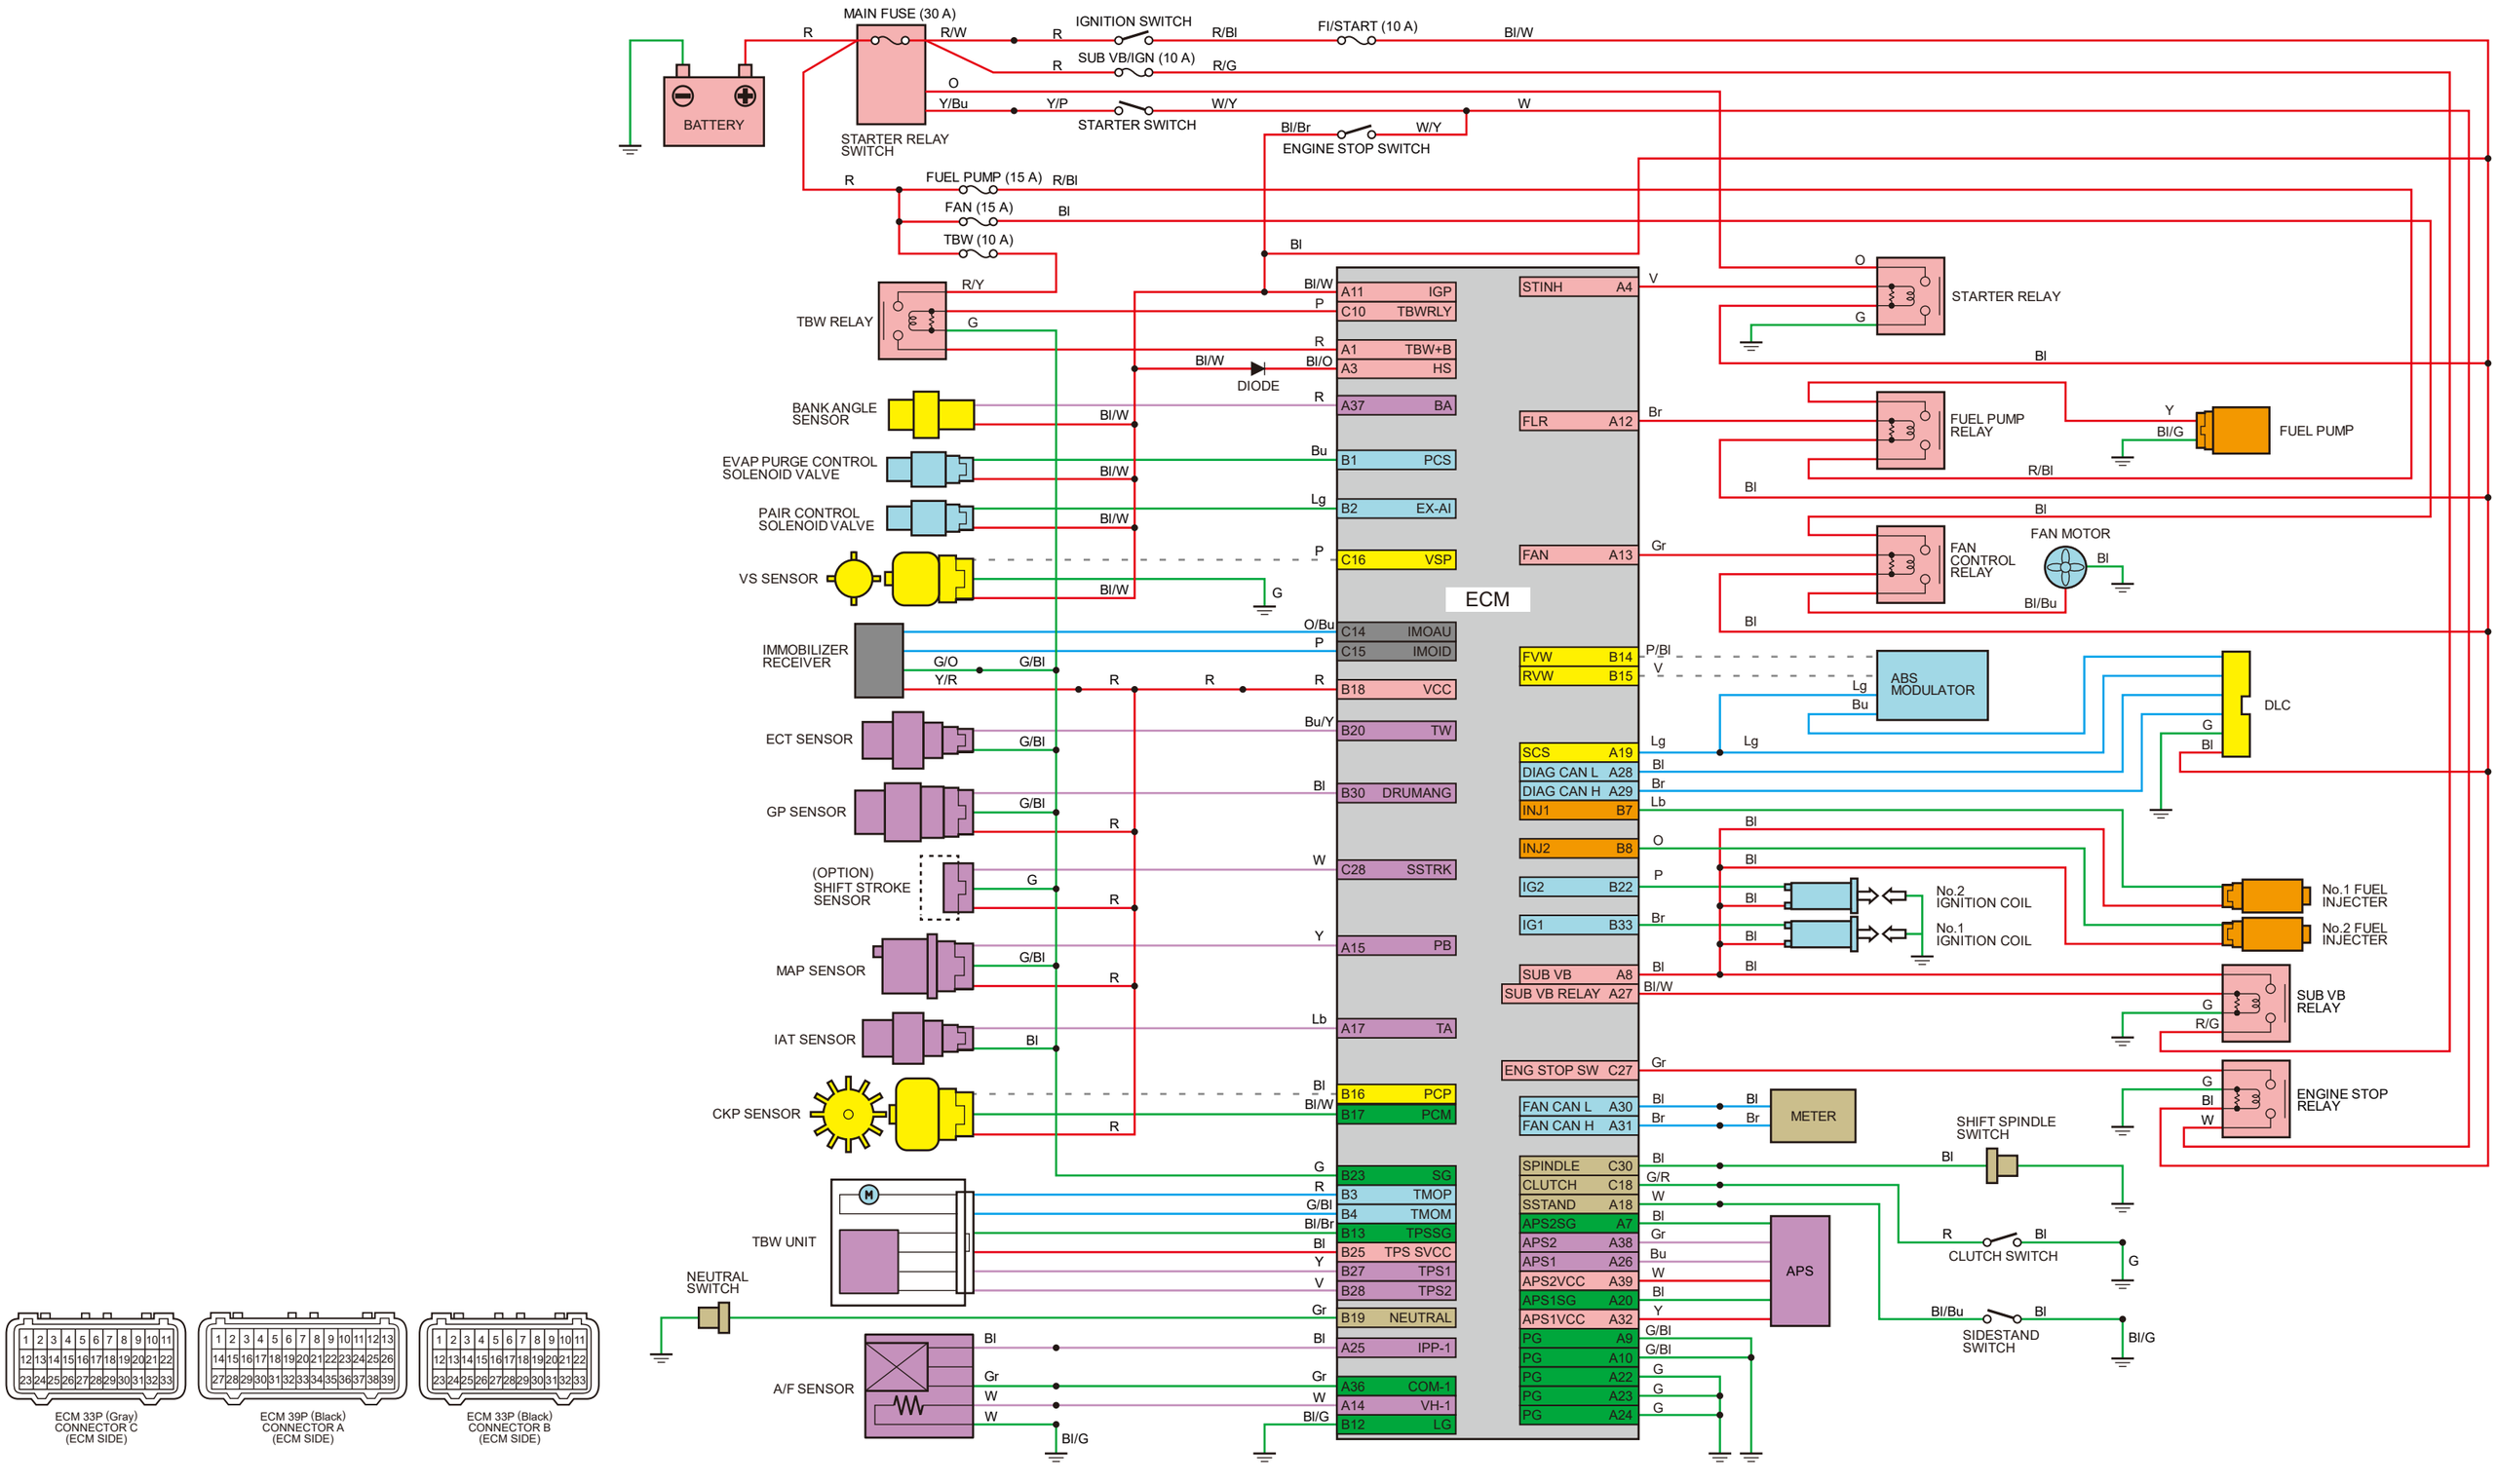
MAIN FUSE (30 A)
IGNITION SWITCH
FI/START (10 A)
SUB VB/IGN (10 A)
BATTERY
STARTER RELAY SWITCH
STARTER SWITCH
ENGINE STOP SWITCH
FUEL PUMP (15 A)
FAN (15 A)
TBW (10 A)
TBW RELAY
DIODE
BANK ANGLE SENSOR
EVAP PURGE CONTROL SOLENOID VALVE
PAIR CONTROL SOLENOID VALVE
VS SENSOR
IMMOBILIZER RECEIVER
ECT SENSOR
GP SENSOR
(OPTION) SHIFT STROKE SENSOR
MAP SENSOR
IAT SENSOR
CKP SENSOR
TBW UNIT
NEUTRAL SWITCH
A/F SENSOR
ECM
A11 IGP
C10 TBWRLY
A1 TBW+B
A3 HS
A37 BA
B1 PCS
B2 EX-AI
C16 VSP
C14 IMOAU
C15 IMOID
B18 VCC
B20 TW
B30 DRUMANG
C28 SSTRK
A15 PB
A17 TA
B16 PCP
B17 PCM
B23 SG
B3 TMOP
B4 TMOM
B13 TPSSG
B25 TPS SVCC
B27 TPS1
B28 TPS2
B19 NEUTRAL
A25 IPP-1
A36 COM-1
A14 VH-1
B12 LG
STINH A4
FLR A12
FAN A13
FVW B14
RVW B15
SCS A19
DIAG CAN L A28
DIAG CAN H A29
INJ1 B7
INJ2 B8
IG2 B22
IG1 B33
SUB VB A8
SUB VB RELAY A27
ENG STOP SW C27
FAN CAN L A30
FAN CAN H A31
SPINDLE C30
CLUTCH C18
SSTAND A18
APS2SG A7
APS2 A38
APS1 A26
APS2VCC A39
APS1SG A20
APS1VCC A32
PG A9
PG A10
PG A22
PG A23
PG A24
STARTER RELAY
FUEL PUMP RELAY
FUEL PUMP
FAN CONTROL RELAY
FAN MOTOR
ABS MODULATOR
DLC
No.2 IGNITION COIL
No.1 IGNITION COIL
No.1 FUEL INJECTER
No.2 FUEL INJECTER
SUB VB RELAY
ENGINE STOP RELAY
METER
SHIFT SPINDLE SWITCH
CLUTCH SWITCH
SIDESTAND SWITCH
APS

ECM 33P (Gray)
CONNECTOR C
(ECM SIDE)
ECM 39P (Black)
CONNECTOR A
(ECM SIDE)
ECM 33P (Black)
CONNECTOR B
(ECM SIDE)